

Attach the Hasselback

Due to the unique mechanical design of the Hasselblad camera, we kindly ask you to review the following steps before installing your Hasselback.



Please ensure that the gears and ejecting hook of your Hasselback is in its original position. If it is not, please rotate the eject knob/crank until the hook returns to its original position.





How to return the gears and ejecting hook to its original position

- Advance your Hasselback Camera.
- Press the shutter (*** Make sure the camera body doesn't protrude any gears or metal parts***)





I. Align the camera body latch with the small hole on the Hasselback, keeping the angle parallel.



Do not install the hasselback and camera at a large angle, as this may damage the body latch








2. Slide the Hasselback until you hear a "click" sound.



Check the alignment between the Hasselback and your Camera. And the Ejecting hitch is in the original position before shooting.

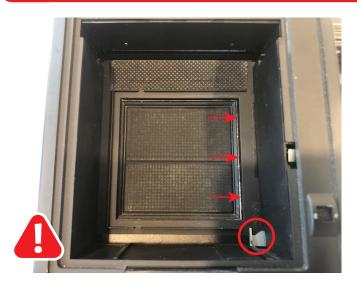





Detach the Hasselback

Due to the unique mechanical design of the Hasselblad camera, we kindly ask you to review the following steps before installing your Hasselback.



Please ensure that the gears and ejecting hook of your Hasselback is in its original position. If it is not, please rotate the eject knob/crank until the hook returns to its original position.

- I. Advance your Hasselback Camera
- 2. Press the shutter



3. Slide the Hasselback







4. Remove the Hasselback



Video: How to detach the Hasselback



All Video Guides

