

SnapRoll

Quick Start Guide

使用説明書 取扱説明書

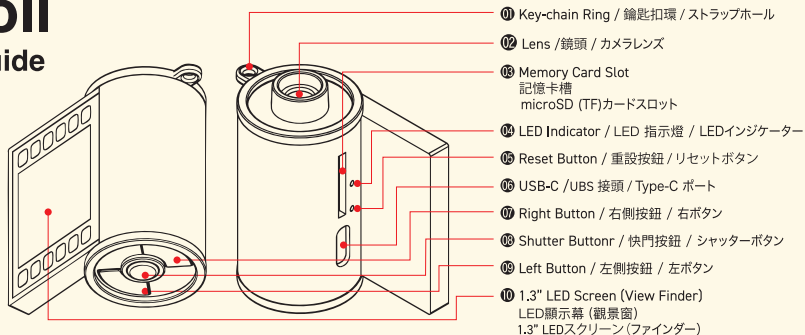


Photo Shooting Mode

1. Press the Shutter Button 08 for 2 seconds switch on the camera.
2. The LED Indicator 04 will turn red.
3. Frame your photo using the View Finder 10.
4. Press the Shutter Button 08 to take the photo.
5. The LED Indicator 04 will flash red once.
6. The photo will be saved to the memory card.

Video Shooting Mode *

1. Press the Shutter Button 08 for 2 seconds switch on the camera.
 2. Press the Right Button 07 once enter Video Shooting Mode.
 3. The LED Indicator 04 will turn blue.
 4. Frame your video using the View Finder 10.
 5. Press the Shutter Button 08 to start recording.
 6. The LED Indicator 04 will keep flashing blue, and the time code (in red) will be displayed on the LED screen.
 7. Press the Shutter Button 08 again to stop recording.
 8. The video will be saved to the memory card.
- * The video will be saved as a file every 5 minutes and will keep recording continuously.

Photo Frame Shooting Mode

1. Press the Shutter Button 08 for 2 seconds switch on the camera.
2. Press the Right Button 07 twice enter Photo Frame Shooting Mode.
3. The LED Indicator 04 will turn purple.
4. Frame your photo using the View Finder 10.
5. Press the Shutter Button 08 to take the photo.
6. The LED Indicator 04 will flash once in purple.
7. The photo will be saved to the memory card.

Apply Photo Filter

1. Press the Left Button in any shooting mode (Photo/Video/Filtered Photo) to switch between different filters for your photo or video.

Digital Photo Frame Mode (Connected with a Power Source)

1. Press the Shutter Button 08 for 2 seconds switch on the camera.
2. Press the Right Button 07 for 2 seconds enter Digital Photo Frame Mode.
3. The LED indicator 04 will turn red and will continue to flash during charging. It will turn off once the charging is complete.
4. Press the Right Button 07 or Left Button 09 to browse the photo/video album.
5. Photos will be displayed while the camera is connected to a power source.
6. The camera will shut down in 60 seconds if it is not connected to a power source.

拍照模式

1. 按住快門按鈕 08 兩秒鐘。
2. LED 指示燈 04 會變為紅色。
3. 通過取景器 10 對焦您的照片。
4. 按下快門按鈕 08 以拍攝照片。
5. LED 指示燈 04 會閃爍一次紅色。
6. 照片將保存到記憶卡中。

錄影模式 *

1. 按住快門按鈕 08 兩秒鐘。
 2. 按右側按鈕 07 一次進入錄影模式。
 3. LED 指示燈 04 會變為藍色。
 4. 通過取景器 10 對焦您的視頻。
 5. 按下快門按鈕 08 開始錄影。
 6. LED 指示燈 04 會持續閃爍藍色，並在 LED 螢幕上顯示時間碼 (紅色)。
 7. 再次按下快門按鈕 08 以停止錄影。
 8. 影片將保存到記憶卡中。
- * 影片將每5分鐘保存為一個檔案，並將持續錄製。

相框拍照模式

1. 按住快門按鈕 08 兩秒鐘。
2. 按右側按鈕 07 兩次進入相框拍照模式。
3. LED 指示燈 04 會變為紫色。
4. 通過取景器 10 對焦您的照片。
5. 按下快門按鈕 08 拍攝照片。
6. LED 指示燈 04 會閃爍一次紫色。
7. 照片將保存到記憶卡中。

應用照片濾鏡

1. 在任何拍攝模式下 (照片/視頻/濾鏡照片)，按下左側按鈕即可切換不同的濾鏡，應用於您的照片或影片。

數位相框模式 (連接電源)

1. 按住快門按鈕 08 兩秒鐘開機。
2. 按右側按鈕 07 兩秒鐘進入數位相框模式。
3. LED 指示燈 04 會變為紅色，並於充電期間持續閃爍，並於充電完成後熄滅。
4. 按右側按鈕 07 或左側按鈕 09 瀏覽照片/視頻專輯。
5. 當相機連接到電源時，將顯示照片。
6. 如果相機未連接到電源，將在 60 秒後關閉。

写真撮影モード

1. シャッターボタン 08 を2秒間押すと、カメラがオンになります。
2. LEDインジケーター 04 は赤に点灯します。
3. ファインダー 10 を使って写真の構図を決めます。
4. シャッターボタン 08 を押して写真を撮ります。
5. LEDインジケーター 04 が一度赤く点滅します。
6. 写真はメモリーカードに保存されます。

動画撮影モード *

1. シャッターボタン 08 を2秒間押すと、カメラがオンになります。
 2. 右ボタン 07 を一度押すと、動画撮影モードに入ります。
 3. LEDインジケーター 04 は青に点灯します。
 4. ファインダー 10 を使って動画の構図を決めます。
 5. シャッターボタン 08 を押して録画を開始します。
 6. LEDインジケーター 04 は青く点滅し、タイムコード (赤で表示) がLED画面に表示されます。
 7. シャッターボタン 08 を再度押すと録画が停止します。
 8. 動画はメモリーカードに保存されます。
- * 動画は5分ごとにファイルとして保存され、継続的に録画されます。

フォトフレーム撮影モード

1. シャッターボタン 08 を2秒間押すと、カメラがオンになります。
2. 右ボタン 07 を2回押すと、フォトフレーム撮影モードに入ります。
3. LEDインジケーター 04 は紫に点灯します。
4. ファインダー 10 を使って写真の構図を決めます。
5. シャッターボタン 08 を押して写真を撮ります。
6. LEDインジケーター 04 が紫に一度点滅します。
7. 写真はメモリーカードに保存されます。

写真フィルターの利用

1. 任意の撮影モード (写真/動画/フィルター付き写真) で左ボタンを押すと、異なるフィルターを切り替えることができます。

デジタルフォトフレームモード (電源に接続している場合)

1. シャッターボタン 08 を2秒間押すと、カメラがオンになります。
2. 右ボタン 07 を2秒間押すと、デジタルフォトフレームモードに入ります。
3. LEDインジケーター 04 は赤に点灯し、充電中は点滅し続けます。充電が完了すると消灯します。
4. 右ボタン 07 または左ボタン 09 を押して、写真/動画アルバムをブラウズします。
5. カメラが電源に接続されている間、写真が表示されます。
6. 電源に接続されていない場合、60秒後にカメラは自動的にシャットダウンします。

escura



製品保証ポリシー 保証期間:ご購入日より6ヶ月間 この保証は香港、台湾、タイ、韓国、シンガポール、マレーシア内でのみ有効です。

ご購入後はすぐに製品をご確認ください。万が一付属品の不足や本体の初期不良などがある場合は商品受取後14日以内に下記連絡先(info@escura-camera.com)まで Eメールにてご連絡ください。

※修理や保証対応の際には必ず必要となりますので、お買い上げ時のシート(お買い上げ明細書)などは必ず保存してください。

- 香港、台湾、タイ、韓国、シンガポール、マレーシア国内において本製品の取扱説明書の注意事項等に従った使用方法および使用方法で保証期間内に製品本体が万一故障した場合には、下記の保証規定により無償で修理もしくは交換いたします。
- 修理に関わる運賃・諸掛り費用はお客さまのご負担となります。

【保証規定】

1 保証の対象となる部分: 製品本体のみ

2 保証期間内で次のような場合には、有償修理になります。

- ① 本製品の取扱説明・取扱上の注意事項等に従った使用状態および使用方法以外の誤操作などによる故障・損傷。② お客様ご自身や第三者による修理・改造・分断で生じる故障・損傷。③ お買い上げ時のシート(お買い上げ明細書)などの がない場合、お買い上げ当日、販売店が不明の場合。④ 火災、水害、地震など天災地災による故障・損傷。⑤ 落下や衝撃、製品内部に水・液体・湿気が入った場合、あるいは砂塵、水かぶり等が原因で発生した故障および損傷。⑥ 保管上の不備(高温、多湿の場所、有害薬品のある場所での保管等)や入れの不良等による故障および損傷。⑦ 製品の誤使用によって生じる外観上の変化(本体のキズ・汚れ・色あせ・変形等)⑧ 経年劣化を含む⑨ お客様のご都合によるものの場合。

3 次のような場合は、修理および交換の対象外です。

- ① 電池・付属品(ストラップなど) ② お買い上げ商品が香港、台湾、タイ、韓国、シンガポール、マレーシア国外または海外通販・並行輸入品及び正規販売店以外から購入されたもの、中古転売品(オークションなど)においてご購入の場合。
- 本保証は保証規定に従った無償修理を約束するものであり、お客様の法的権利を制限するものではありません。
- 本製品の故障および製品の使用によって生じた直接・間接の損害および付随的損害(撮影に要した諸費用、および撮影により得べき利益の喪失、記録されたデータが正常に保存、読み出しができないことによって発生した損害)については補償いたしかねます。
- 本製品の故障や本製品の不適当な使用やその他の理由により生じた賠償や過失利益について、使用者又は第三者からのいかなる請求もについて、当社は一切その責任を負いかねますので予めご了承ください。

本製品のお手入れ: 製品や液体などを使わず柔らかい布やマイクロファイバークロスなどで軽く拭き取ってください。

WARRANTY POLICY Warranty Period: 6 months from the date of purchase - This warranty is only valid within Hong Kong, Taiwan, Thailand, Korea, Singapore and Malaysia.

1. When requesting a repair, please be sure to attach the receipt from the place of purchase and contact either the store or the Escura Customer Service Center.

2. If the receipt from the place of purchase is not attached, the repair will be chargeable.

3. Repairs not due to normal usage will be chargeable. (Including but not limited to the following items)

(1) Failures due to misuse or improper use (2) Failures due to improper storage or humidity (3) Failures due to fire, flooding, or natural disasters (4) Failures due to repairs, modifications, or disassembly performed by anyone other than our company (5) Failures due to similar causes (6) Replacement of consumables (LEDs, rechargeable batteries, etc.) (7) Failures due to drops, impacts, sand, mud, or immersion in water (8) Purchases made through personal sales or auctions

4. Receipts that do not indicate the purchase date or the name of the store will be invalid.

5. Please keep your receipt in a safe place.

6. If shipping or transportation costs are incurred for the repair, they will be the responsibility of the customer.

7. We cannot guarantee the failure of accessories used with our products.

8. Please note that we do not conduct on-site inspections, repairs, instruction manuals, setup, etc., regardless of whether the service is chargeable or free of charge.

9. This warranty is only valid within Hong Kong, Taiwan, Thailand, Korea, Singapore and Malaysia.

10. This warranty guarantees free repairs in accordance with the warranty policy and does not limit your legal rights.

[Reminder] When requesting a repair, please clearly specify the repair location and details.

escura

escurainstant60s

escura.lab

<https://www.escura-camera.com/>